


# How to...

## Replace Spring Holder – from Moulded to Metal

### Steps 1 & 2

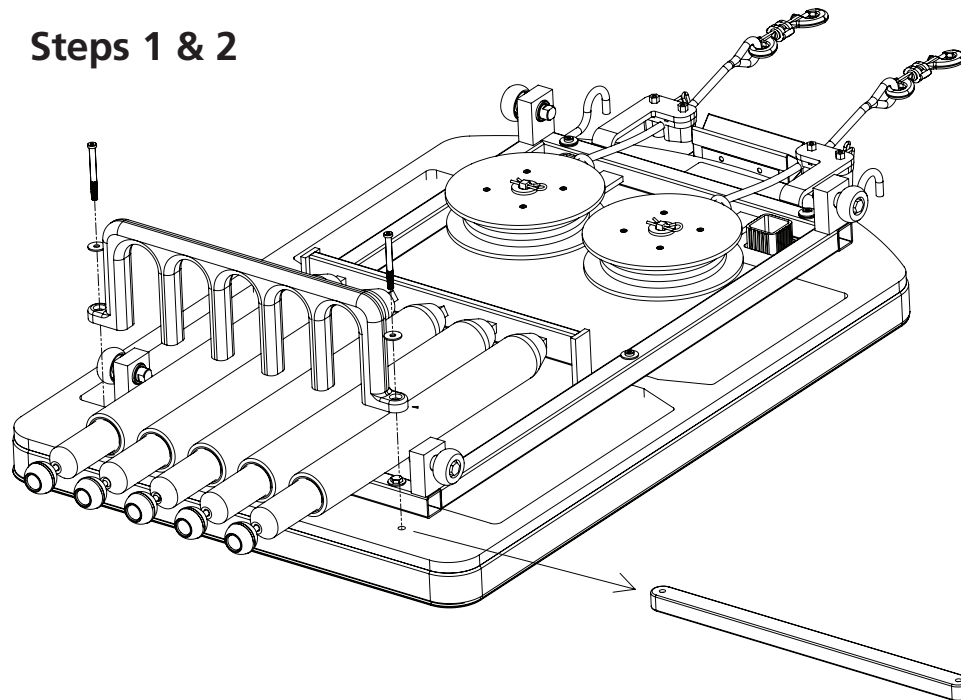

### Removal

1. Remove the carriage from your Reformer.

**NOTE:** Two people are required to remove and reinstall the carriage.


2. Unscrew the two bolts and remove the spring holder (including the spacer if your Reformer has one).

**NOTE:** These instructions apply to all versions of Spring Holders.


3. Unscrew and remove the two carriage hex bolts and their associated washers.

**NOTE:** Discard original bolts and washers.


### Step 3

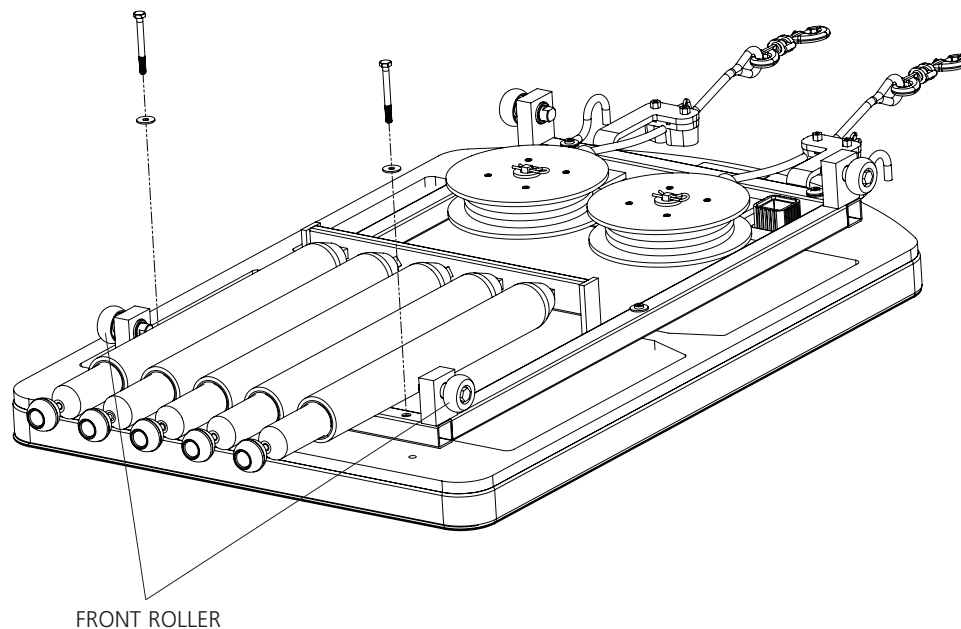

## Steps 4 & 5

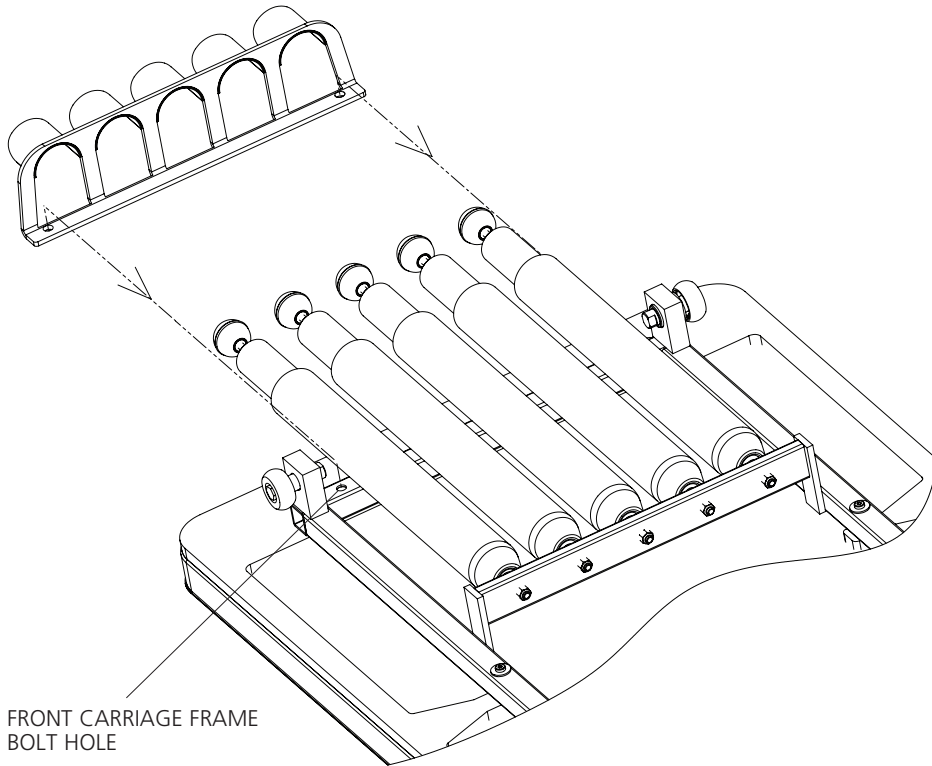

## Steps 6 & 7

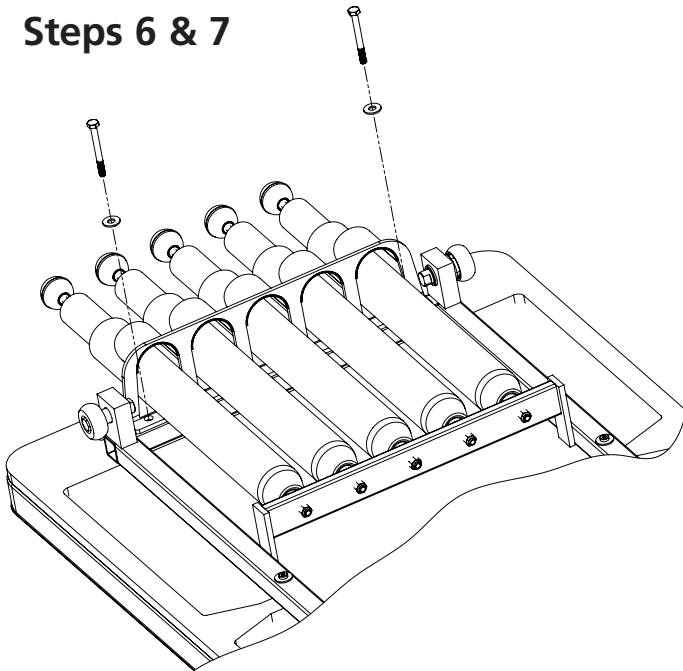

## Replacement

4. Insert springs through the Spring Holder arches, aligning it over the front carriage frame bolt holes.

5. Select the correct bolts from the Spring Holder kit.

**NOTE:** Use the longer bolts (2-1/2" / 63.5 mm) for the professional series of Reformers. If your Reformer is the SPX series choose the shorter bolts (2-1/4" / 57.15 mm).

6. Place new washers over the metal spring holder bolt holes. Screw the bolts down through the holder and carriage frame until it is firmly secured using a 7/16" (11.1125 mm) wrench.

7. Replace the carriage.



For more information contact our Customer Service

1.800.910.0001 ext. 0907 | 0800.328.5676 ext. 0907 (UK)

416.482.4050 ext. 0907 (Customer Care)

customerservice@merrithew.com

merrithew.com