

Reformer

Spring Replacement

For video assembly instructions, visit merrithew.com/eq-assembly



Please review this important **assembly** and **warranty** information about your replacement Merrithew™ equipment parts and keep it handy for future reference.

Removing Springs


Important: Read full instructions before beginning.
For step-by-step video instruction visit merrithew.com/eq-assembly

⚠ IMPORTANT

Replace all springs every 24 months and spring clips every 12 months, or as needed within that period.

FAILURE TO PERFORM RECOMMENDED SAFETY CHECKS, OR USING EQUIPMENT WITH IMPROPERLY ADJUSTED, BROKEN OR WORN PARTS, COULD RESULT IN SERIOUS BODILY INJURY.


Ball End of Spring

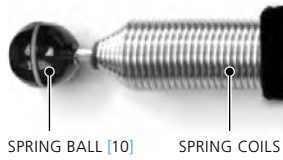

Bolt End of Spring



1. Remove carriage. Find full instructions on page 22 of your Reformer's Manual or view video online at merrithew.com/support/equipment-manuals-assembly

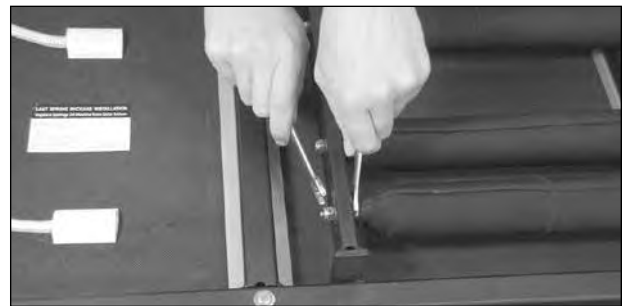


2. With 7/16" wrench or pliers, hold fixed cube nut in place.



3. Using second 7/16" wrench on opposite side of spring anchoring bar, loosen nylon locknut. This may require exerting a bit of torque.

NOTE: Discard used nylon locknuts and washers.

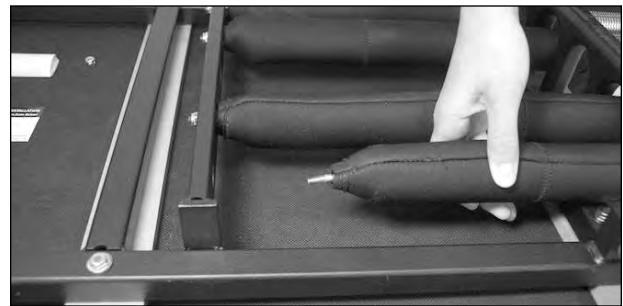

4. Remove spring bolt from spring anchoring bar, then pull ball end of the spring out of holder.



5 Repeat steps 2 to 4 on remaining springs.



6. Affix the sticker provided with your spring replacement package to the underside of the Carriage.

Installing New Springs

Required Tools

2 Open End Wrenches, 1/2"(13mm) x 7/16"(14mm)

or
Open End Wrench + Pliers or Vice Grips + Phillips Screwdriver



1. Remove the nylon locknut and washer from bolt end of spring.



2. Remove the nylon locknut and washer from bolt end of spring.




3. Insert spring bolt through the corresponding hole on spring anchoring bar.



4. Add washer and thread nylon locknut onto spring bolt.

NOTE: Do not reuse old nylon locknuts or washers.

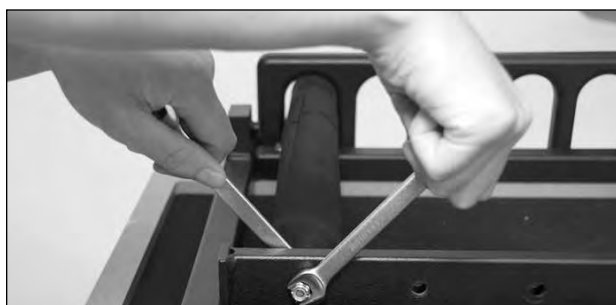


5. Hold fixed cube nut in place with 7/16" wrench. Using second 7/16" wrench, tighten nylon locknut.

CAUTION: Do not overtighten.



6. Both nylon locknut and fixed cube nut should be snug up against spring anchoring bar. Once secure, give the nylon locknut an additional 1/4 turn clockwise.

CAUTION: Do not overtighten.

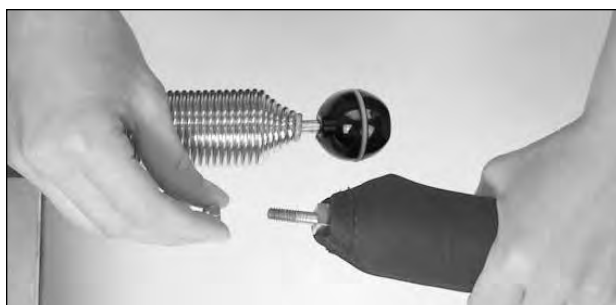

7. Repeat steps 1 to 6 for remaining springs



8. Before replacing carriage, wipe rollers and inside of aluminum rails (c-channels) with a soft damp cloth. *Find full instructions on page 23 of your Reformer Owner's Manual or view video online at merrithew.com/support/equipment-manuals-assembly*

Warranty

Merrithew™ warrants that all new equipment is free of manufacturing defects in workmanship and materials, subject to the terms below. This warranty becomes effective at the invoice date of the original purchase. Parts repaired or replaced under the terms of this warranty will be warranted for the remainder of the original warranty period.

It is the purchaser's responsibility to notify the Company of any change of contact information. This ensures, that in the unlikely event of a replacement or safety notice, we are able to contact you immediately.

This warranty applies to equipment only:

- While it remains in the possession of the original purchaser and proof of purchase is demonstrated
- If claims are made within the part-specific warranty period
- If upgrades are made as required by Merrithew

This warranty shall be null and void if:

- **Equipment failure is a result of improper assembly, installation or maintenance**
- **The equipment is used for any other purpose other than as intended, or is stored or used outdoors, or in environments without adequate climate/humidity controls**
- **Equipment has been subjected to accident, misuse, abuse, improper service, or any modification not authorized by Merrithew**

This warranty does not cover damage to the finish of any equipment nor shipping charges, customs clearance fees (if applicable), or any costs incurred in installing repaired or replacement parts shipped under the provisions of this warranty.

Two (2) Year Limited Warranty

Merrithew will, at its option, repair or replace springs that fail for any reason, provided such failure is reported to Merrithew within a period of two years from the invoice date of the original purchase.

Failure to change springs every two (2) years may void warranty.

One (1) Year Limited Warranty

On all spring clips.

We recommend that spring clips (including those attached to traditional-style ropes) be changed annually

Disclaimer of Implied Warranties and Limitation of Remedies

Repair or replacement of defective parts is your exclusive remedy under the terms of this limited warranty. In the event of parts availability issues, Merrithew will not be responsible for any consequential or incidental damages arising from the breach of either this limited warranty or any applicable implied warranty, or for failure or damage resulting from acts of nature, improper care and maintenance, accident, alteration, replacement of parts by anyone other than Merrithew, misuse, transportation, abuse, hostile environments (inclement weather, acts of nature), improper installation or installation not in accordance with local codes or printed instructions.

This limited warranty is the sole express warranty given by Merrithew. No product performance, specification or description wherever appearing is warranted by Merrithew except to the extent set forth in this limited warranty. Any implied warranty protection arising under the laws of any state, province or territory including implied warranty of merchantability or fitness for a particular purpose, or use, is hereby limited in duration to the duration of this limited warranty.

Neither distributors, dealers, web resellers, nor the retailers selling this product have any authority to make any additional warranties or to promise remedies in addition to, or inconsistent with those stated above. Merrithew's maximum liability, in any event, shall not exceed the purchase price of the product paid by the original purchaser.

IMPORTANT

Please keep this guide in a safe place.

If you have questions, issues or are missing parts:

Please contact customer@merrithew.com

416.482.4050 | 1.800.910.0001 | 0800.328.5676 UK | ext. 288

