


How to...

Replace Wooden Standing Platform

Steps 1 to 3

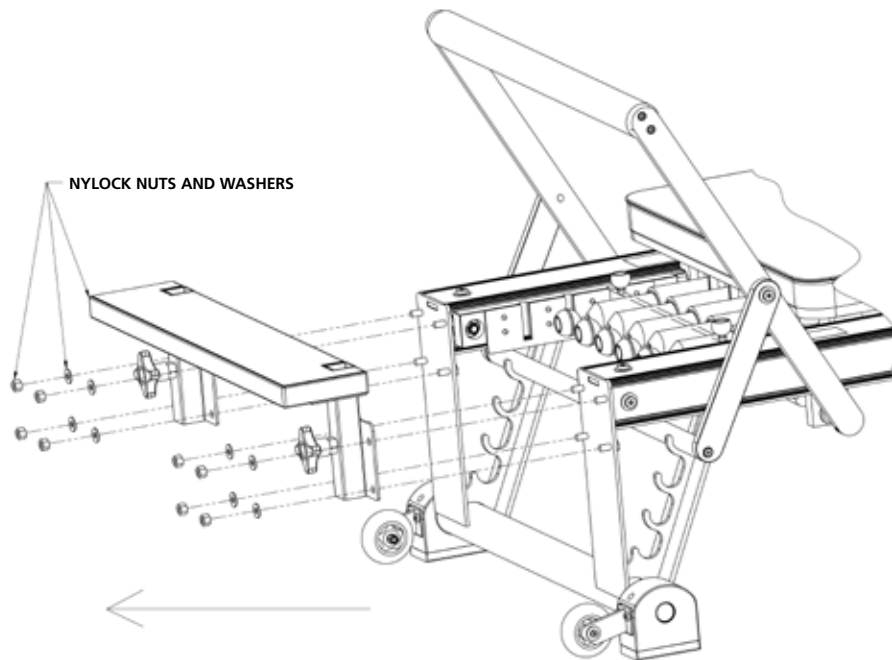


Removal

Professional Rehab, V2 Max, Rack & Roll and Client Reformers

1. Remove eight (8) nylock nuts (four per side) positioned underneath the wooden standing platform behind the aluminum rails.
2. Remove eight (8) washers (four per side) off of the bracket holding bolts.
3. Slide the support bracket off the eight (8) bolts.


Steps 4 to 6

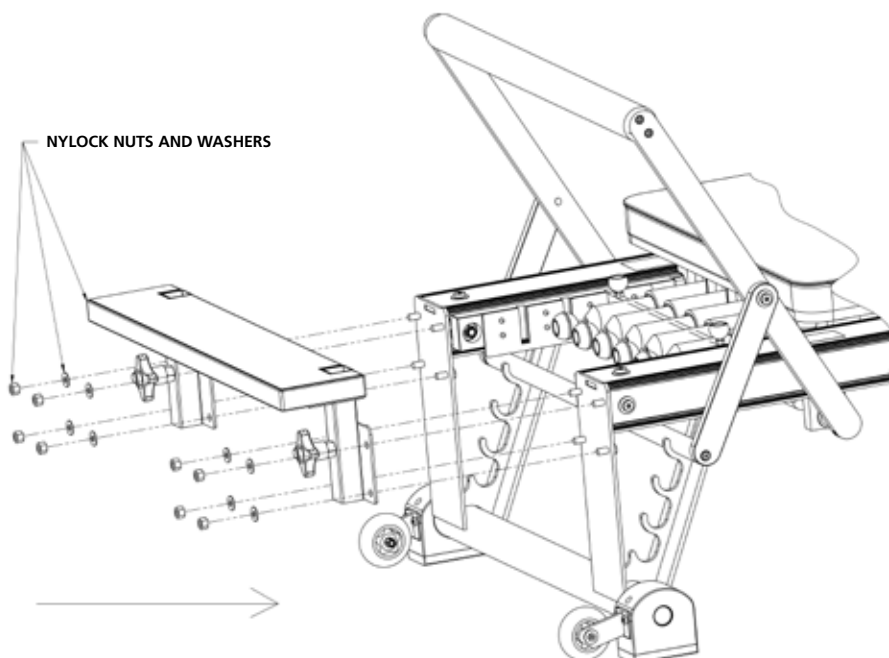

Replacement

4. Position replacement bracket with wooden standing platform onto the eight (8) bolts.
5. Reattach all eight (8) washers and nylock nuts.
6. Ensure that all nuts are tightened.


Step 1

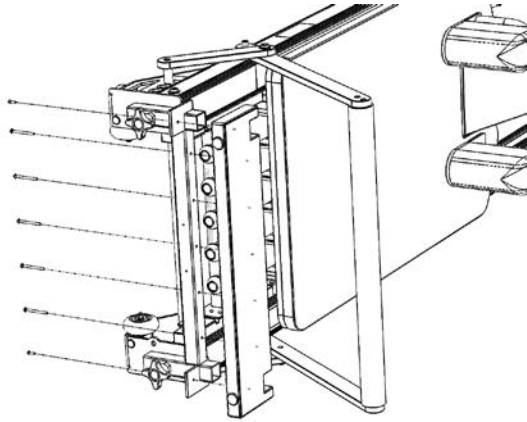


SPX Reformers

1. Remove the seven (7) screws from underneath the platform attach it to the front support end of the Reformer.
2. Position the new wooden standing platform onto the front support end aligning the seven (7) pilot holes on its underside with the seven (7) screw holes in the frame of the front support end.
3. Insert and tighten all screws.

Step 2

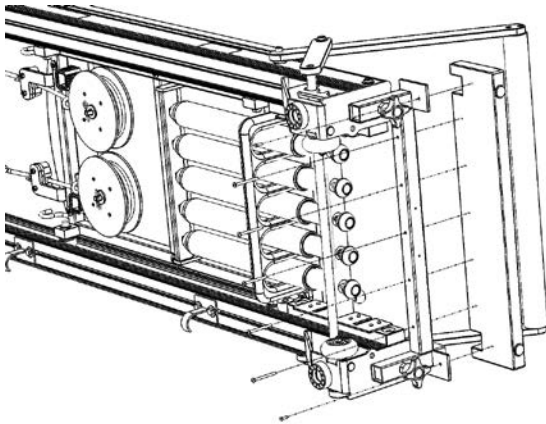

Step 3

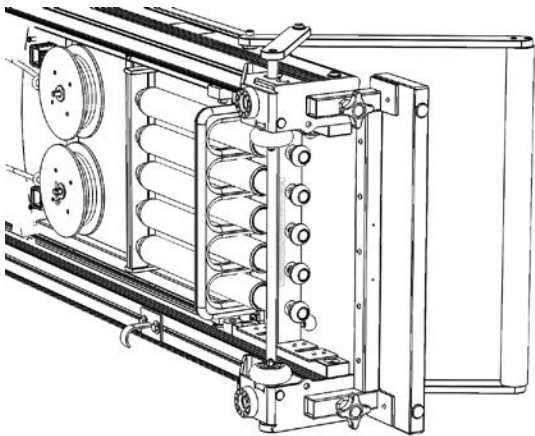

For more information contact our Customer Service

1.800.910.0001 ext. 288 | 0800.328.5676 ext. 288 (UK) | 416.482.4050 ext. 288 (Customer Care)
customerservice@merrithew.com | merrithew.com